



## NOTES:

- 1 ADJUST "VOUT ADJ" POT FOR BATTERY FLOAT VOLTAGE.
- 2 BATTERY CURRENT IS MAXIMIZED.